

This warranty is valid only in the United States.

SONY®

Portable Memory Stick Audio Player/  
Portable MiniDisc Recorder/  
Portable CD Player/  
Portable IC Audio Player/  
Portable Hard Disk Audio Player

Portable Audio

## LIMITED WARRANTY

Sony Electronics Inc. ("Sony") warrants this Product (including any accessories) against defects in material or workmanship as follows:

1. **LABOR:** For a period of 90 days from the date of purchase, if this Product is determined to be defective, Sony will repair or replace the Product, at its option, at no charge, or pay the labor charges to any Sony authorized service facility. After the Warranty Period, you must pay for all labor charges.

2. **PARTS:** In addition, Sony will supply, at no charge, new or rebuilt replacements in exchange for defective parts for a period of one (1) year. After 90 days from the date of purchase, labor for removal and installation is available from Sony authorized service facilities or a Sony Service Center at your expense.

To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any authorized Sony service facility.

This warranty does not cover customer instruction, installation, set up adjustments or signal reception problems.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product, including the antenna. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Sony to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty is valid only in the United States.

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

For your convenience, Sony Electronics Inc. has established telephone numbers for frequently asked questions:

To locate the servicer or dealer nearest you, or for service assistance or resolution of a service problem, or for product information or operation, contact:

[www.sony.com/walkmansupport](http://www.sony.com/walkmansupport)

Sony Network Portable Audio Support Line  
1-866-456-7669

For an accessory or part not available from your authorized dealer, call:

1-800-488-SONY (7669)

D 324343304

SONY®

2-318-333-14 (1)

D-NE920/NE920LS

Operating Instructions

ATRAC CD Walkman

Portable  
CD Player



Atrac3plus



<http://www.sony.net/>

Sony Corporation Printed in Malaysia



\* 2 3 1 8 3 3 1 4 \* (1)

© 2004 Sony Corporation



## WARNING

**To prevent fire or shock hazard, do not expose the unit to rain or moisture.**

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

### CAUTION

The use of optical instruments with this product will increase eye hazard.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

### CAUTION

- INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS
- CLASS 1M INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

### Owner's Record

The model number is located at the rear and the serial number is located inside the lid of the CD player. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

**For the customers in the USA and Canada**

### RECYCLING NICKEL METAL HYDRIDE BATTERIES

Nickel Metal Hydride batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.



For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbrc.org/>.

**Caution:** Do not handle damaged or leaking Nickel Metal Hydride batteries.

**For customers who purchased this product in the USA**

### Product registration

Please register this product on line at [www.sony.com/walkmanreg](http://www.sony.com/walkmanreg)  
<<http://www.sony.com/walkmanreg>>

Proper registration will enable us to send you periodic mailings about software upgrades, new products, services and other important announcements. Thank you.

**If you have any questions about this product, contact:**

[www.sony.com/walkmansupport](http://www.sony.com/walkmansupport)

**Sony Network Portable Audio Support Line  
1-(866)-456-7669**

**Sony Customer Information Services Center  
12451 Gateway Blvd., Ft. Myers, FL 33913**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment

# Table of Contents

<b>Create Your Own ATRAC CDs .....</b>	<b>4</b>
Which discs can you play on this CD player? .....	5
<b>Precautions .....</b>	<b>7</b>
On safety .....	7
On the CD player .....	7
On handling CDs .....	7
On headphones/earphones .....	7

## Getting Started

<b>Checking the Supplied Accessories....</b>	<b>8</b>
<b>Guide to Parts and Controls.....</b>	<b>9</b>
<b>Preparing a Power Source (Rechargeable Battery) .....</b>	<b>11</b>
When using a dry battery .....	13
Checking the remaining power of the battery .....	14
When using the AC power adaptor.....	15

## Playback

<b>Playing a CD .....</b>	<b>16</b>
Basic playback operations (Play, stop, search) .....	17
Locking the controls (HOLD) .....	18
<b>Searching for Your Favorite Track/File .</b>	<b>18</b>
Searching by viewing groups (File View) .....	18
Searching by viewing a list of groups/files (List View) .....	19
Checking CD information on the display .....	20
<b>Changing Playback Options (PLAY MODE) .....</b>	<b>22</b>
Playback options (PLAY MODE) .....	23
Playing groups.....	24
Playing your favorite tracks (Bookmark play).....	24
Playing your favorite play lists (m3u play list play).....	25
Playing tracks in your favorite order (PGM play).....	25
Playing tracks repeatedly (Repeat play) ...	26

<b>Changing Sound Quality .....</b>	<b>26</b>
Selecting the sound quality .....	26
Customizing sound quality .....	27
SOUND items .....	28
<b>Changing Optional Settings.....</b>	<b>29</b>
Setting various functions .....	29
OPTION items .....	30
<b>Connecting Other Devices .....</b>	<b>33</b>

## Additional Information

<b>Troubleshooting .....</b>	<b>34</b>
<b>Maintenance .....</b>	<b>38</b>
<b>Specifications.....</b>	<b>38</b>
<b>Optional Accessories .....</b>	<b>39</b>
<b>Index .....</b>	<b>40</b>

This manual describes how to use the CD player. For the supplied software SonicStage, please see "Installation/Operating Guide."

## Notice for users

### On the supplied software

 
Depending on the type of the text and characters, the text shown on SonicStage may not be displayed properly on the device. This is due to:

- The limitations of the connected player.
- The player is not functioning normally.

Instructions in this manual mainly describe the controls on the remote.

Depending on the region in which you use the player, indications displayed on your remote may be slightly different from those shown in the Operating Instructions.

ATRAC3plus is a trademark of Sony Corporation.

"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.  is a trademark of Sony Corporation.

# Create Your Own ATRAC CDs

In addition to the usual audio CDs, you can play an original CD, called “ATRAC CD,” that you create with the supplied software, SonicStage. Using SonicStage, about 30 audio CDs\* can be recorded on one CD-R or CD-RW.

The following is a quick overview of how you listen to music on your ATRAC CD.


## Install SonicStage on your computer.

SonicStage is software that takes music downloaded from audio CDs on your computer and creates original CDs. It can be installed from the supplied CD-ROM.



## Create an ATRAC CD.

After selecting your favorite songs from music stored on your computer, record them on a CD-R/CD-RW using SonicStage.

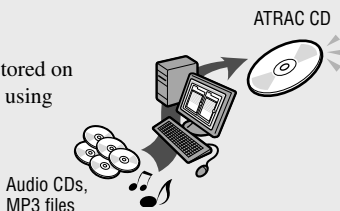

## Listen to them with this CD player.

You can take lots of songs wherever you go on your original CD.



Please see the supplied “Installation/Operating Guide” for how to install SonicStage and how to create ATRAC CDs.

\* When the total playing time of one CD (album) is estimated at 60 minutes and you are recording on a 700 MB CD-R/CD-RW at 48 kbps in ATRAC3plus format.

## Which discs can you play on this CD player?



### Audio CDs:

#### CD-DA format CDs

CD-DA (Compact Disc Digital Audio) is a recording standard used for Audio CDs.



### ATRAC CDs:

#### CD-R/CD-RW on which audio data compressed in the ATRAC3plus format has been recorded by using SonicStage\*

ATRAC3plus (Adaptive Transform Acoustic Coding3plus) is audio compression technology that satisfies the demand for high sound quality and high compression rates. ATRAC3plus can compress audio files to about 1/20 of their original size at 64 kbps.

Bit rates and sampling frequencies this CD player can play are:

	Bit rates	Sampling frequencies
ATRAC3	66/105/132 kbps	44.1 kHz
ATRAC3plus	48/64/256 kbps	44.1 kHz

Up to 62 characters can be displayed on this CD player.



### MP3 CDs:

#### CD-R/CD-RW on which audio data compressed in the MP3 format has been recorded by using a software other than SonicStage\*

Bit rates and sampling frequencies this CD player can play are shown below. Variable Bit Rate (VBR) files can also be played.

	Bit rates	Sampling frequencies
MPEG-1 Layer3	32 - 320 kbps	32/44.1/48 kHz
MPEG-2 Layer3	8 - 160 kbps	16/22.05/23 kHz
MPEG-2.5 Layer3	8 - 160 kbps	8/11.025/12 kHz

This CD player conforms to Version 1.0/1.1/2.2/3/2.4 of the ID3 tag format. ID3 tag is a format for adding certain information (track name, album name, artist name, etc.) to MP3 files. Up to 64 characters of ID3 tag information can be displayed on this CD player.



### CD-Extra and Mix-Mode CDs:

#### CD-R/CD-RW on which CD-DA format data and CD-ROM format data are recorded together.\*

If you cannot play your CD, change the "CD-EXTRA" setting in the OPTION menu (ⓘ page 32). Then you may play your CD.

An ATRAC CD on which audio data compressed in the MP3 format has been recorded using software other than SonicStage can also be played.

With SonicStage, you cannot create a CD on which mixed format audio data is recorded.

\* Only ISO 9660 Level 1/2 and Joliet extension format discs can be played.

## Music discs encoded with copyright protection technologies

This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

### Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

### Difference in File structures of ATRAC CDs and MP3 CDs

ATRAC CDs and MP3 CDs consist of "files" and "groups." A "file" is equivalent to a "track" of an audio CD. A "group" is a bundle of files and is equivalent to an "album."

For MP3 CDs, this CD player recognizes an MP3 folder as a "group" so that ATRAC CDs and MP3 CDs can be operated in the same way.


### The usable number of groups and files

- Maximum number of groups: 256
- Maximum number of files: 999

### Playing order of ATRAC CDs and MP3 CDs

For ATRAC CDs, files are played in the order selected in SonicStage.

For MP3 CDs, the playing order may differ depending on the method used to record MP3 files on the disc. A "play list" which contains an MP3 file playing order can also be played. In the following example, files are played in order of ① to ⑦.

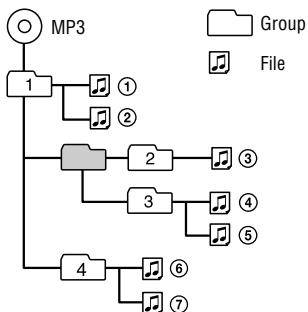

(Maximum directory levels: 8)

### Notes

- If ATRAC3plus files and MP3 files are recorded on the same CD, this CD player plays the ATRAC3plus files first.
- The playback capability of this CD player may vary depending on the quality of the disc and the condition of the recording device.
- Acceptable characters are A to Z, a to z, 0 to 9, and \_ (underscore).
- On a disc that has ATRAC3plus/MP3 files, do not save files in other formats and do not make unnecessary folders.

### About ATRAC CDs

- CD-Rs/CD-RWs recorded in the ATRAC3plus format cannot be played on your computer.

### About MP3 CDs

- Be sure to add the file extension "mp3" to the file name. However, if you add the extension "mp3" to a file other than an MP3 file, the player will not be able to recognize the file properly.
- To compress a source in an MP3 file, we recommend setting the compression parameters to "44.1 kHz," "128 kbps," and "Constant Bit Rate."
- To record up to the maximum capacity, set the writing software to "halting of writing."
- To record up to the maximum capacity at one time on media that has nothing recorded on it, set the writing software to "Disc at Once."

---

## Precautions

### On safety

- Should any solid objects or liquid fall into the CD player, unplug it and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 3 V (external power input) jack.

### On the CD player

- Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.
- Do not put any heavy object on top of the CD player. The CD player and the CD may be damaged.
- Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.
- If the CD player causes interference to the radio or television reception, turn off the CD player or move it away from the radio or television.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player. Attempting to do so may damage the CD player. Do not use such discs.

### On handling CDs

- To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.

## On headphones/earphones

### Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

### Preventing hearing damage

 
Avoid using headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

### Consideration for others


Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

## Checking the Supplied Accessories


- AC power adaptor (AC-ES3010K2)
- Charging stand



 - External battery case with cover
- Rechargeable battery



 - Battery carrying case
- Carrying pouch



- Earphones
- Remote control (Remote)  
(For this CD player only)



- CD-ROM (SonicStage)  
Do not play this CD-ROM on an audio CD player including this player.




- Operating instructions (This book)
- Installation/Operating Guide
- AC plug adaptor (Supplied with tourist model)

### Note

Use only the supplied remote. You cannot operate this player with any other remote.


### To connect your earphones/headphones to the remote

Connect the plug of your earphones/headphones to the remote securely.

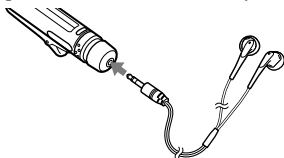

### To use the clip of the remote

You can change the direction of the clip. Turn the clip as shown below. You can also reverse the direction of the track name, etc. (page 29, 31).

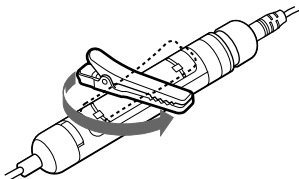


### For customers in the US

The AC power adaptor supplied with this unit is not intended to be serviced. Should the AC power adaptor cease to function in its intended manner during the warranty period, the adaptor should be returned to your nearest Sony Service Center or Sony Authorized Repair Center for replacement, or if a problem occurs after the warranty period has expired, the adaptor should be discarded.




# Guide to Parts and Controls

## CD player

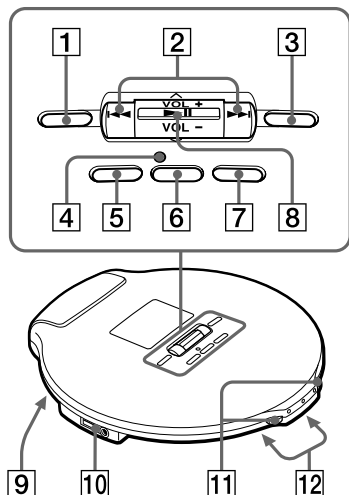

## Remote

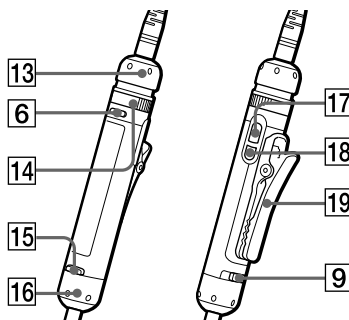


- 1 [ ] (group) – button (☞ page 17-19)
- 2 ◀▶ buttons (☞ page 17, 22, 26, 27)
- 3 [ ] (group) + button (☞ page 17, 18)
- 4 OPR (Operation) lamp (☞ page 11, 12, 16, 18)
- 5 DSPL (Display)/MENU button (☞ page 21, 22, 24, 26)
- 6 SEARCH button (☞ page 18, 19)
- 7 ■ (stop)/CHG button (☞ page 12, 17, 25, 27, 28, 30)
- 8 Jog lever  
VOL (Volume) +/- (☞ page 16)  
Λ/V (☞ page 18, 19, 22, 24-27)  
▶|| (play/pause) (☞ page 16-19, 22, 24-27)
- 9 HOLD switch (on the back of the CD player) (☞ page 18)
- 10 ⌚ (headphones)/LINE OUT (OPTICAL) jack (☞ page 16, 33)
- 11 OPEN switch (☞ page 11, 16)
- 12 Terminals for the charging stand/external battery case (☞ page 11, 14, 15)
- 13 Operation dial (☞ page 17, 19, 24-27, 29)
- 14 VOL (Volume) +/- control (☞ page 16, 19, 24)
- 15 Function button (☞ page 20, 22, 25-27)
- 16 Function dial (☞ page 20, 22, 25-27)
- 17 ▶|| (play/pause)\* button (☞ page 16, 17, 19, 22, 24-27)
- 18 ■ (stop) button (☞ page 17, 25, 28, 30)
- 19 Clip (☞ page 8)


\* This button has a tactile dot.

Continued ➞

## CD player display

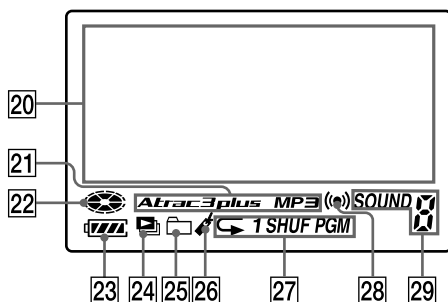

## Remote display

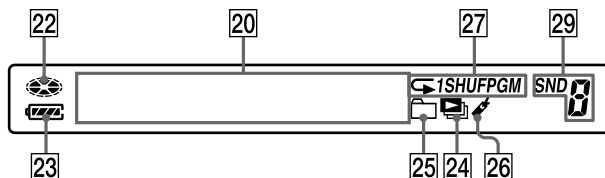

20 Character information display (☞ page 20, 21)

21 Atrac3plus/MP3 indicator (☞ page 5)

22 Disc indicator (☞ page 16)

23 Battery indicator (☞ page 11, 14)

24 Play list indicator (☞ page 23, 25)

25 Group indicator (☞ page 23, 24)

26 Bookmark indicator (☞ page 23, 24)

27 Play mode indicator (☞ page 23, 25)

28 Timer indicator (☞ page 31)


29 Sound indicator (☞ page 27)

## Preparing a Power Source (Rechargeable Battery)


Charge the rechargeable battery before using it for the first time or when it is depleted. To maintain the original battery capacity longer, charge the battery only when it is completely depleted ("Lo Batt" appears on the display).

Since the supplied charging stand is for this player only, you cannot charge any other model using this stand.


- 1 Squeeze the OPEN switch from both sides to open the lid of your player.

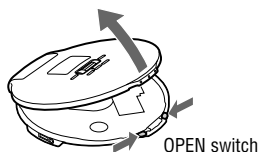



- 2 Open the battery compartment lid inside the player.

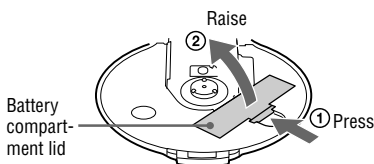


- 3 Insert the NH-14WM rechargeable battery (supplied) by matching the ⊕ to the diagram in the battery compartment and close the lid until it clicks into place.

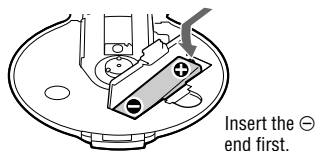

 - 4 Connect the AC power adaptor to the supplied charging stand. Then insert the player into the charging stand.

The OPR lamp on the CD player flashes, then lights up. On the display of the CD player, "Charging" flashes, and the indicator sections of  (battery) light up in succession as charging progresses. When the remote is connected, "Charging" flashes and the indicator sections of  (battery) light up in succession in the remote display.

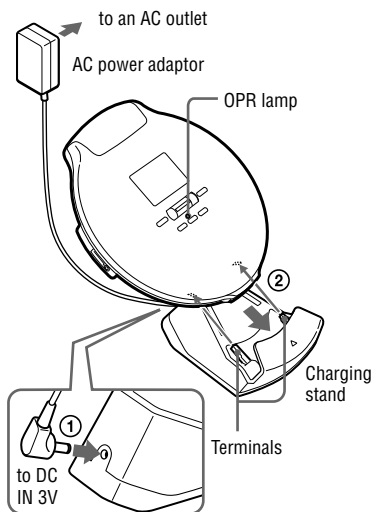


When the battery is completely charged, the OPR lamp goes off and "Charging" disappears.


Continued ➞

## Notes

- Do not charge any rechargeable battery other than an NH-14WM (supplied) using this charging stand.
- If you press ►|| on the jog lever during charging, charging stops and playback of the CD starts.
- If you insert the player into the charging stand during playback, play stops and charging starts.
- During charging, the player and the rechargeable battery become hot. This poses no danger.
- Insert the player into the charging stand securely. Make sure that the OPR lamp on the player lights up. Wrong insertion interrupts charging or play.
- Do not place coins or other metallic objects on the charging stand. If the terminal on the charging stand is accidentally brought into contact with a metallic object, it may short-circuit and begin to heat up.
- Take out the rechargeable battery when the player is not to be used for a long time.
- The lengths of the charging stand terminals are different from each other. This, however, presents no problem.


## To charge the rechargeable battery without using the supplied charging stand

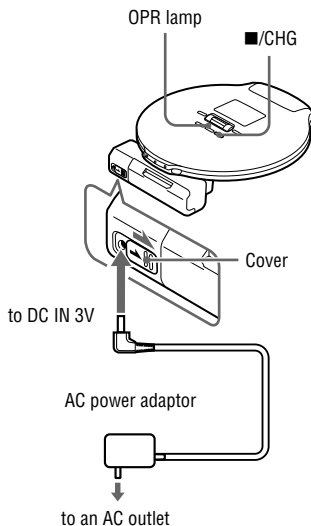

- 1 Perform steps **1** and **2** of “When using a dry battery” (☞ page 13) to attach the external battery case to the player.
- 2 While sliding and holding the cover on the external battery case in the direction of , connect the AC power adaptor.
- 3 Press **■/CHG**.  
Charging starts.

## To remove the rechargeable battery

Push the ⊖ end of the rechargeable battery.

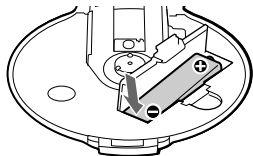

### Note on the useful life of the rechargeable battery and when to replace it

If the battery is new or has not been used for a long time, it may not charge completely. In that case, charge it until the OPR lamp goes off and then use the player until the battery is completely depleted ("Lo Batt" appears on the display). Repeat this procedure several times.

When the battery life is still shorter by about half of a normal charge after trying this procedure, replace the battery with a new rechargeable battery.

### Note on carrying the rechargeable battery


Use the supplied battery carrying case to protect against unexpected heat. If the rechargeable battery comes into contact with the metallic objects, heat or fire may occur due to a short circuit.

### When using a dry battery


You can extend the power available by using a dry battery, together with a rechargeable battery by attaching the external battery case. The battery in the player and that in the external battery case are discharged simultaneously.

When using the rechargeable battery and dry battery together to extend power, use a fully charged rechargeable battery and new dry battery.

#### 1 Remove the case cover.

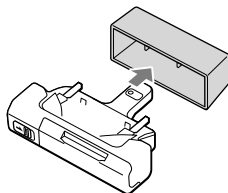


#### 2 Insert an LR6 (size AA) alkaline battery (not supplied) by matching the ⊕ to the diagram inside the battery case and close the battery case lid.

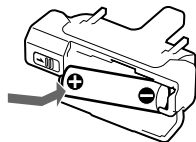


Continued ➞

### 3 Attach the battery case to the player securely and fasten the screw in the direction of LOCK.

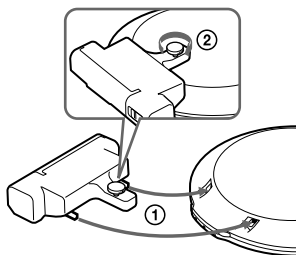


#### Note

If the cover on the external battery case is slid in the direction of  during play, playback may stop.

## Checking the remaining power of the battery

 The remaining power of the battery is indicated in the display as shown below. As the black indicator section decreases, the remaining power is depleted further.



\* Beep sounds.

When the battery is depleted, charge the rechargeable battery or replace the dry battery with a new one.

#### Notes

- The display shows the approximate battery power remaining. For example, one section does not always indicate one-fourth of the battery power.
- Depending on the operating conditions, the display may increase or decrease relative to the actual power remaining.

## Battery life <sup>1)</sup>

When using one NH-14WM rechargeable battery (charged for about 5 hours <sup>2)</sup>)

	G-PROTECTION	
	"1"	"2"
Audio CD	18	17
ATRAC CD <sup>3)</sup>	40	40
MP3 CD <sup>4)</sup>	22	22

When using the external battery case (one alkaline battery <sup>5)</sup>)

	G-PROTECTION	
	"1"	"2"
Audio CD	30	27
ATRAC CD <sup>3)</sup>	60	60
MP3 CD <sup>4)</sup>	33	33

When using one NH-14WM rechargeable battery and the external battery case (one alkaline battery <sup>5)</sup>)

	G-PROTECTION	
	"1"	"2"
Audio CD	48	44
ATRAC CD <sup>3)</sup>	100	100
MP3 CD <sup>4)</sup>	55	55

1) Measured value using the JEITA standard (Japan Electronics and Information Technology Industries Association)

Playing time shown is approximate hours, when you use the player on a flat and stable surface and "POWER SAVE" is set to "2" (page 31). This value varies depending on how the player is used.

2) Charging time varies depending on how the rechargeable battery is used.

3) Recorded at 48 kbps

4) Recorded at 128 kbps


5) When using a Sony LR6 (SG) alkaline battery (produced in Japan)

## Notes on rechargeable batteries and dry batteries

- Do not charge dry batteries.
- Do not throw the batteries into a fire.
- Do not carry batteries in a pocket, etc. with coins or other metallic objects. The battery can generate heat if its positive and negative terminals are accidentally allowed to come into contact with a metallic object.
- Do not mix rechargeable batteries with dry batteries.
- Do not mix new batteries with old ones.
- Do not use different types of batteries together.
- When the batteries are not to be used for a long time, remove them.
- If battery leakage occurs, wipe off any deposit left in the battery compartment, and install new batteries. If the deposit adheres to your skin, wash it off thoroughly.

## When using the AC power adaptor

You can use the player powered by the AC power adaptor without batteries.

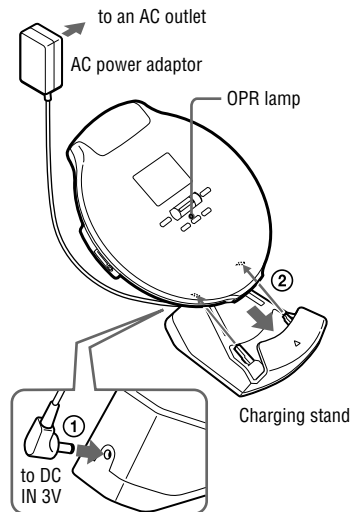


### 1 Connect the AC power adaptor to the charging stand.

### 2 Insert the player into the charging stand.

Make sure that the OPR lamp flashes, then lights up.

### Notes on the AC power adaptor

 - Disconnect all power sources when the player is not to be used for a long time.
- Use only the AC power adaptor supplied. If your player is not supplied with the one, use an AC-E30HG AC power adaptor (not available in Australia). If you use any other AC power adaptor, malfunction may occur.




- Do not touch the AC power adaptor with wet hands.
- Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.


## Playing a CD

### 1 Squeeze the OPEN switch from both sides to open the player lid.

Connect the headphones/earphones with the remote to the player beforehand.

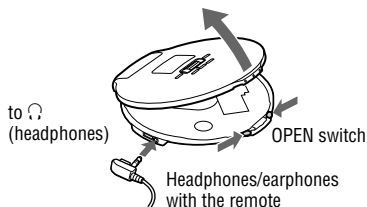

### 2 Place the CD on the tray and close the lid.

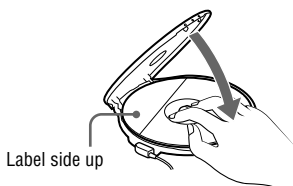


The OPR lamp lights up repetitively in red, green and orange, in turn.


### 3 Press ►II on the remote.

 (disc) moves, and the player starts playback.

Color of the OPR lamp changes according to the format type of the music source (see page 5) being played. Red: CD-DA format, Green: ATRAC3plus format and Orange: MP3 format.




### 4 Adjust the volume by turning the VOL +/- control on the remote.

 

VOL +/- control


### On the CD player

After placing the CD on the tray in step 2, press ►II on the jog lever and adjust the volume by flicking the jog lever toward VOL +/-.

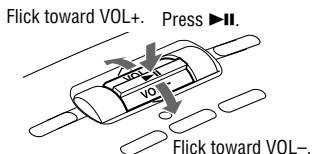

### To remove the CD


Remove the CD while pressing the pivot in the center of the tray.

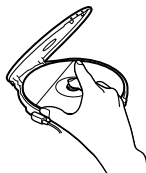




# Basic playback operations (Play, stop, search)

## CD player

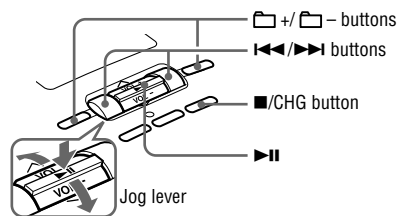

## Remote

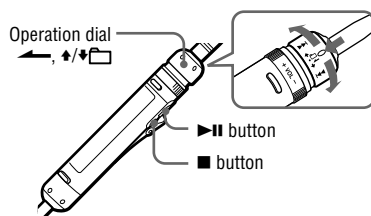

To	Operation on the remote (Operation on the player is in parentheses)	
<b>Play</b>	Play from the first track	From stop, press and hold ►► until playback starts. (From stop, press and hold ►► on the jog lever until playback starts.)
<b>Stop</b>	Pause/Resume play after pausing	Press ►►. (Press ►► on the jog lever.)
	Stop playback	Press ■ (stop). (Press ■/CHG.)
<b>Search</b>	Find the beginning of the current track <sup>1)</sup>	Turn the operation dial toward I< once. (Press I< once.)
	Find the beginning of previous tracks <sup>1)</sup>	Turn the operation dial toward I< repeatedly. (Press I< repeatedly.)
	Find the beginning of the next track <sup>1)</sup>	Turn the operation dial toward ►► once. (Press ►► once.)
	Find the beginning of succeeding tracks <sup>1)</sup>	Turn the operation dial toward ►► repeatedly. (Press ►► repeatedly.)
	Go backwards quickly <sup>1) 3)</sup>	Turn the operation dial toward I< and hold it. (Press and hold I<.)
	Go forward quickly <sup>1) 3)</sup>	Turn the operation dial toward ►► and hold it. (Press and hold ►►.)
	Jump to succeeding groups <sup>2)</sup>	Turn the operation dial toward ↗ repeatedly while you keep the dial pressed in the direction of ↖. (Press ↖ (group) + repeatedly.)
	Jump to previous groups <sup>2)</sup>	Turn the operation dial toward ↘ repeatedly while you keep the dial pressed in the direction of ↖. (Press ↖ (group) – repeatedly.)

1) You can operate during both play and pause.

2) You can operate during play of a CD other than audio CDs.

3) You cannot operate when using an MP3 file recorded on a CD-R/CD-RW in a packet write format.


Continued ➞

## Locking the controls (HOLD)

You can prevent accidental button presses while carrying the player by locking the controls. The OPR lamp flashes if you press any button when the HOLD function on the player is activated.

### 1 Slide the HOLD switch on the remote or on the player (on the back) in the direction of the arrow.

You can use the HOLD function for the remote and the player separately. For example, even if the HOLD function on the player is activated, you can operate the player by using the remote unless you set HOLD on the remote to on, too.

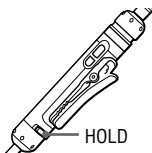


### To unlock the controls

Slide the HOLD switch in the direction opposite to that of arrow.

#### Note

Even if the HOLD function is working, "HOLD" will not appear on the display of the remote.

## Searching for Your Favorite Track/File

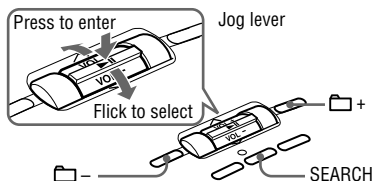


## Searching by viewing groups (File View)

On a CD such as an ATRAC CD or an MP3 CD on which a number of files are recorded, you can search for a file by checking the names of groups (except on an audio CD) or files around the file being played. The File View search feature is available for the CD player only.

### 1 Press SEARCH on the CD player repeatedly.

The names of groups and files around the current file appear on the display.

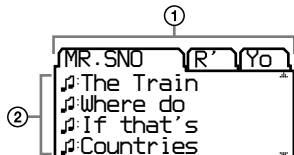

- ① Group names
- ② File names

### 2 Press + or - to select a group.

### 3 Flick the jog lever toward $\wedge/\vee$ to select a file.

### 4 Press on the jog lever.

The file you selected starts playing.

 
### To cancel searching

Press on the remote (/CHG on the CD player).

## Searching by viewing a list of groups/files (List View)

You can search for a track/file by checking the format type of the music source and the names of groups and files. The List View search is available for the remote as well as the CD player.

### 1 Press SEARCH on the CD player repeatedly.



If you play a CD on which mixed audio data has been recorded:

The screen for selecting the format type such as “ATRAC” and “MP3” appears first.

Press **▶II** on the jog lever.

### 2 Flick the jog lever toward $\wedge/\vee$ to select a group and press **▶II**.

### 3 Flick the jog lever toward $\wedge/\vee$ to select a file.

### 4 Press **▶II** on the jog lever.

The file you have selected starts playing.

## On the remote

### 1 Press SEARCH.

### 2 Turn the VOL +/- control to select a group, and then press **▶II**.

If you select a group on an MP3 CD, etc. by searching through all the directories, turn the operation dial toward **◀◀** or **▶▶**.

### 3 Turn the VOL +/- control to select a file, and then press **▶II**.

The file you have selected starts playing.

### To return to the previous screen

On the remote, turn the operation dial toward **◀◀**, or turn the operation dial toward **▶▶** while you keep the dial pressed in the direction of **◀◀**. (On the CD player, press **◀◀** or **▶▶**.)

### To cancel searching

Press **■** on the remote (**■/CHG** on the CD player).

Continued

## Checking CD information on the display

You can check CD information on the display of both the player and the remote.


Depending on the region in which you purchased your CD player, the default language may not be "ENGLISH." Change the LANGUAGE setting, if necessary (ⓘ page 30).

When you are playing an MP3 CD containing files with an ID3 tag, ID3 tag information is displayed. (When there is no ID3 tag information, file name or group name is displayed.) (ⓘ page 5)

### Notes

- The characters A-Z, a-z, 0-9, and \_ can be displayed on this player.
- Before playing a file, the player reads all file and group (or folder) information on the CD. "Reading" is displayed. Depending on the content of the CD, it may take some time to accomplish this reading.
- If the file does not belong to any group, "MP3 ROOT" appears on the display.


## To check information on the remote display

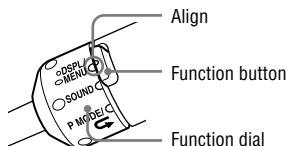


Turn the function dial on the remote to select DSPL/MENU and press the function button repeatedly.

### Audio CD

 
→ Track number, elapsed playing time (Track name, artist name)<sup>1)</sup>



 ↓  
Total number of the files on the CD, time remaining on the CD (Album name)<sup>1)</sup>




↓  
Animation screen

 

### ATRAC CD/MP3 CD

 
→ File number, file name, artist name, elapsed playing time



↓  
File number, album name, CODEC information <sup>2)</sup>, remaining time of the current file



 ↓  
Animation screen



## To check information on the CD player display

Press DSPL/MENU on the player repeatedly.

### Audio CD

 
Track number, elapsed playing time  
(Album name, artist name, track name)<sup>1)</sup>



Total number of tracks on the CD, total playing time of the CD, number of tracks left<sup>3)</sup>, time remaining on the CD<sup>3)</sup>



File view screen




### ATrac CD/MP3 CD


Group name<sup>4)</sup>, artist name<sup>4)</sup>, file name,  
file number, elapsed playing time



 CODEC information<sup>2)</sup>, total number of files,  
total number of groups, file number,  
remaining time of the current file



File view screen

 


- 1) When you are playing an audio CD containing text information such as CD-TEXT, information in parentheses is displayed.
- 2) Bit rate and sampling frequencies are displayed. While an MP3 file made at VBR (variable bit rate) is being played, "VBR" appears on the display instead of a bit rate. In some cases, "VBR" appears halfway through playback, rather than from the beginning.
- 3) The displays appear only during normal play.
- 4) During play, "artist name" is not displayed if the disc does not have ID3 tag information. When the list of group names/file names appears on the display, "artist name" and "group name" are not displayed.

## Changing Playback Options (PLAY MODE)

You can use various playback options such as selecting songs you want to listen to, and playing songs in your favorite order.

For details about playback options, see page 23.


You can also play songs repeatedly using the playback options you choose (repeat play, page 26).

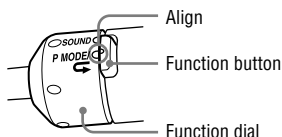

- 1 During play, turn the function dial on the remote to select P MODE/ and press the function button repeatedly to select a playback option.

The playback option you selected lights up or flashes.

 If the playback option flashes, press .



### On the CD player

 
- 1 Press DSPL/MENU until the menu screen appears.



 
: PLAYMODE  
 : SOUND  
 : OPTION

- 2 Flick the jog lever toward  $\wedge/\vee$  to select “ PLAY MODE” and press .

- 3 Flick the jog lever toward  $\wedge/\vee$  to select the playback option.  
 The default setting is “ALL” (normal play).



 







 
 
- 4 Press on the jog lever.
- 5 When “REPEAT” appears, select “ON” or “OFF” and press on the jog lever.



### To return to normal play

On the remote, turn the function dial to select P MODE/ and press the function button repeatedly until the playback option disappears. (On the CD player, select “ALL” in the PLAY MODE menu.)

## Playback options (PLAY MODE)

Display on the remote/ on the CD player	Explanation
No display/ALL	All tracks on the CD are played in a track number order. For the ATRAC CD/MP3 CD, a playing order is different according to the setting of the "PLAY ORDER" in the OPTION menu.
 /GROUP	All files in the selected group or all groups are played (ATRAC CD/MP3 CD only) (  page 24).
1	The current track is played once.
SHUF/SHUFFLE	All tracks on the CD are played once in random order.
 SHUF/GROUP SHUFFLE	All files in the selected group are played once in random order (ATRAC CD/MP3 CD only) (  page 24).
 /BOOKMARK	Tracks to which Bookmarks have been added are played. The play of tracks with Bookmarks starts in track number order, not in the order you added the Bookmarks (  page 24).
 /PLAYLIST	Tracks in the selected m3u play list* are played (MP3 CD only) (  page 25).
a00/AUTO RANKING	The tracks you have played most frequently from the CD are played from the 10th to the first.
a00 SHUF/RANKING SHUF	Up to 32 tracks, which the player has automatically memorized as the most frequently played ones, are played in random order.
PGM/PROGRAM	Up to 64 tracks are played in your favorite order (  page 25).
INTRO	About the first 10 seconds of all tracks which follow the current track are played once. If you turn the function dial to select P MODE/  , and press the function button during INTRO play, you can listen to the current track to the end.

\* An m3u play list is a file in which an MP3 file playing order has been encoded. To use the play list function, record MP3 files on a CD-R/CD-RW using encoding software that supports the m3u format.

You can play the top 8 lists (listed by file name) on your screen on the CD player.

Continued 

## Playing groups

- 1 In step 1 of “Changing Playback Options (PLAY MODE)” (ⓘ page 22), select “□” or “□ SHUF.”

- 2 Turn the VOL +/- control to select a group.

If you select a group on an MP3 CD, etc. by searching through all the directories, turn the operation dial toward ◀◀ or ▶▶.

If you select a group within the same directory, turn the VOL +/- control.

- 3 Press ▶II for 2 seconds or more.

The player starts playback of all files in the group you have selected.

### On the CD player

- 1 Perform steps 1 and 2 of “Changing Playback Options (PLAY MODE)” (ⓘ page 22). In step 3, select “GROUP” or “GROUP SHUFFLE” and press ▶II on the jog lever.
- 2 Flick the jog lever toward ^/v to select a group.
- 3 Press ▶II on the jog lever for 2 seconds or more.
- 4 When “REPEAT” appears, select “ON” or “OFF” and press ▶II on the jog lever.

#### Note

If the group has no tracks, “Invalid” appears on the display.

## Playing your favorite tracks (Bookmark play)

- 1 During play of the track to which you want to add a Bookmark, press and hold ▶II on the remote until ⚡ flashes slowly.

- 2 If you want to add a Bookmark to two or more tracks, repeat step 1.

You can add Bookmarks to up to 10 CDs for audio CDs (up to 99 tracks for each CD) and up to 5 CDs for ATRAC CDs/MP3 CDs (up to 999 tracks for each CD).

- 3 In the step 1 of “Changing Playback Options (PLAY MODE)” (ⓘ page 22), select ⚡ (BOOKMARK).

- 4 Press ▶II.

### On the CD player

- 1 During play of the track to which you want to add a Bookmark, press ▶II on the jog lever until ⚡ flashes slowly.
- 2 If you want to add a Bookmark to two or more tracks, repeat step 1.
- 3 Press DSPL/MENU until the menu screen appears.
- 4 Flick the jog lever toward ^/v to select “PLAY MODE,” and press ▶II.
- 5 Flick the jog lever toward ^/v to select “BOOKMARK,” and then press ▶II.

### To remove Bookmarks

During play of a track with a Bookmark, press and hold ▶II on the remote until ⚡ disappears. (On the player, press and hold ▶II on the jog lever.)

#### Notes

- If you try to add Bookmarks to tracks on an 11th CD (on a 6th CD when playing ATRAC CDs/MP3 CDs), the Bookmarks of the CD you played first will be erased.
- All Bookmarks stored in memory will be erased if you remove all power sources, or if you continue playing the player on the rechargeable battery while “Lo Batt” is displayed, without charging the battery.



## Playing your favorite play lists (m3u play list play)

 
- 1 In the step 1 of "Changing Playback Options (PLAY MODE)" (☞ page 22), select (play list).
- 2 Turn the operation dial on the remote toward or to select a play list you want.
- 3 Press .

### On the CD player

- 1 In the step 3 of "Changing Playback Options (PLAY MODE)" on the CD player (☞ page 22), select "PLAYLIST."
- 2 Flick the jog lever toward / to select a play list.
- 3 Press on the jog lever.

## Playing tracks in your favorite order (PGM play)

- 1 While the player stopped, turn the function dial on the remote to select P MODE/ and press the function button repeatedly until "PGM" (program) flashes.



Playing order      Track name or file name

- 2 Turn the VOL +/- control to select a track, and then press and hold until the display changes.

When playing an ATRAC CD/MP3 CD:  
You can also select a file in another group by turning the operation dial toward or while you keep the dial pressed in the direction of .

- 3 Repeat step 2 to select tracks in your favorite order.

You can select up to 64 tracks.

When you finish entering the 64th track, the track number selected first (audio CD)/file name (ATRAC CD/MP3 CD) appears on the display.

If you select 65 tracks or more, the tracks selected first are erased one by one.

- 4 Press on the remote.

Playback starts in the selected order.

### On the CD player

- 1 Select "PROGRAM" in step 3 of the player operation for "Changing Playback Options (PLAY MODE)" (☞ page 22), and then press on the jog lever.
- 2 Turn the jog lever toward / to select your tracks, and press and hold until the display changes.
- 3 After selecting your favorite order, press on the jog lever.

### To check the program



- 1 While the player is stopped, turn the function dial to select P MODE/ and press the function button repeatedly until "PGM" flashes. Then, press and hold on the remote until the display changes. Whenever you press and hold , the tracks are displayed in playing order. (On the CD player: While the player is stopped, select "PROGRAM" in step 3 of the player operation for "Changing Playback Options (PLAY MODE)" (☞ page 22), and press and hold until the display changes. Whenever you press and hold , the tracks are displayed in playing order.)


### To cancel the PGM play

Press on the remote (/CHG on the CD player).

Continued


## Playing tracks repeatedly (Repeat play)

- 1 Turn the function dial on the remote to select **P MODE**/ and press the function button repeatedly to select the playback option you want to repeat ( page 23).



- 2 Press and hold the function button until  (repeat) appears.

The playback option you have selected repeats.


### On the CD player

Select “ON” in step 5 of the player operation for “Changing Playback Options (PLAY MODE)” ( page 22).

### To return to normal play

Turn the function dial on the remote to select **P MODE**/, and then press and hold the function button until  disappears. (On the CD player, select “OFF”.)

## Changing Sound Quality

For details about the setting of SOUND items, see  page 28.

### Selecting the sound quality

You can set up the “EQUALIZER” setting and/or “CLEARBASS” setting. If you set both at the same time, you can enjoy more bass sound along with the sound quality you want.

- 1 Turn the function dial on the remote to select **SOUND**.

- 2 Press the function button repeatedly until “EQUALIZER” or “CLEARBASS” appears.

 
- 3 Press **▶II**.

- 4 Turn the operation dial toward **I◀◀** or **▶▶I** to select the sound quality you want.

- 5 Press **▶II**.

### On the CD player

- 1 Press **DSPL/MENU** until the menu screen appears.
- 2 Flick the jog lever toward **^/V** to select “**SOUND**” and press **▶II**.




- 3 Flick the jog lever toward **^/V** to select the item you want to set up and press **▶II**.
- 4 Flick the jog lever toward **^/V** to select an option and press **▶II**.

## Customizing sound quality

 You can adjust sound quality for each frequency range individually, checking the shape of the wave on the display.

- 1 Turn the function dial on the remote to select **SOUND**, and then press the function button repeatedly until **"EQUALIZER"** appears and press **▶II**.

- 2 Turn the operation dial toward **◀◀** or **▶▶** repeatedly to select **"CUSTOM"** and press **▶II**.




- 3 Turn and hold the operation dial toward **◀◀** or **▶▶** for 2 seconds or more until the frequency range you want to set up appears.

"Low" is displayed first.

There are 3 frequency ranges; "Low" (low range audio), "Mid" (middle range audio), and "Hi" (high range audio).

- 4 Turn the operation dial toward **◀◀** or **▶▶** repeatedly to select the shape of the wave.

 
There are 3 shapes stored in memory for each frequency range.



Frequency range

- 5 Turn the VOL +/- control repeatedly to select the sound volume.

 The sound volume can be adjusted in 7 levels.



Sound volume

- 6 Repeat steps 3 to 5 to make adjustment for the remaining 2 frequency ranges.

- 7 Press **▶II**.

### On the CD player

- 1 Select **"EQUALIZER"** in step 3 and **"CUSTOM"** in step 4 of the player operation for "Selecting the sound quality" (page 26).
- 2 Press **◀◀** or **▶▶** for 2 seconds or more to select the frequency range.
- 3 Press **◀◀** or **▶▶** repeatedly to select the shape of the wave.
- 4 Flick the jog lever toward **^/v** to select the sound volume.
- 5 Repeat steps 2 to 4 to make adjustments for the remaining 2 frequency ranges, and then press **▶II** on the jog lever.

### To return to the previous screen

Press **■** on the remote (**■/CHG** on the CD player).

### To cancel the adjustment operation





Press **■** on the remote (**■/CHG** on the CD player) for 2 seconds or more.

 
### Notes

- If the sound is distorted by your sound settings when you turn up the volume, turn the volume down.
- If you feel a difference in sound volume between the **"CUSTOM"** sound setting and other sound settings, adjust the volume to your preference.

Continued ➞

## SOUND items

To return to the previous screen, press  on the remote (/CHG on the CD player). To cancel the setting operation, press  on the remote (/CHG on the CD player) for 2 seconds or more.

Item	Options (●: Default setting)	
EQUALIZER (Equalizer setting)	● OFF	Normal sound quality
	SOFT	For vocal, stressing middle range audio
	ACTIVE	Lively sounds, emphasizing high and low range audio
	HEAVY	Powerful sounds, further emphasizing high and low ranges compared with ACTIVE sound
	CUSTOM	Customized sound (see  page 27 for details)
CLEARBASS (Bass sound setting)	● OFF	Normal sound quality.
	BASS 1 <sup>1)</sup>	Emphasizing bass sound.
	BASS 2 <sup>1)</sup>	Emphasizing bass sound more than BASS 1.
	BASS 3 <sup>1)</sup>	Emphasizing bass sound more than BASS 2.

1) “1,” “2” or “3” appears on the display on the CD player.

### Note

If you change the setting of the EQUALIZER item after you have set the CLEARBASS item, the setting of the EQUALIZER item gets priority.

When you set both the EQUALIZER item and the CLEARBASS item, set the EQUALIZER item first.

## Changing Optional Settings

For details about the setting of OPTION items, see [page 30](#).

### Setting various functions

You can set the various functions such as the language for the menu and the playback order of the groups/files.

- 1 Turn the function dial on the remote to DSPL/MENU, and then press and hold the function button until the function item flashes on the display.
- 2 Turn the operation dial toward ◀◀ or ▶▶ to select the item you want to set up, and then press ▶II.



- 3 Turn the operation dial toward ◀◀ or ▶▶ to select an option, and then press ▶II.

When you are setting the “LANGUAGE” or “PLAY ORDER,” repeat step 3.

### On the CD player





- 1 Press DSPL/MENU until the menu screen appears.
- 2 Flick the jog lever toward ^/V to select “OPTION” and press ▶II.



- 3 Flick the jog lever toward ^/V to select the item you want to set up and press ▶II.
- 4 Flick the jog lever toward ^/V to select an option and press ▶II.

Continued

## OPTION items

To return to the previous screen, press  on the remote (/CHG on the CD player). To cancel the setting operation, press  on the remote (/CHG on the CD player) for 2 seconds or more.

Items	Options (●: Default settings)	
LANGUAGE (Language for menu, etc.)	MENU <sup>1)</sup>	● ENGLISH      Select the language for menu text, warning message, etc.
		FRENCH
		GERMAN
		ITALIAN
		JAPANESE*
		KOREAN*
		PORTUGUESE
		RUSSIAN
		S.CHINESE*
		SPANISH
		T.CHINESE*      * D-NE920LS only
	TEXT <sup>2) 6)</sup>	● AUTO      Select the language for CD-TEXT, ID3 tag, etc.
		ENGLISH      If you select "AUTO," you can read the text in the following language.
		FRENCH
		GERMAN
		ITALIAN
		JAPANESE*
		KOREAN*
		PORTUGUESE
		RUSSIAN
		S.CHINESE*
		SPANISH
		T.CHINESE*      * D-NE920LS only
G-PROTECTION <sup>3) 6)</sup> (To prevent sound skipping)	● 1	Protection against sound skipping is provided with high quality CD sound.
	2	Enhanced protection against sound skipping is provided.
AVLS <sup>4)</sup> (Limiting volume)	● OFF	The volume changes without limiting the volume level.
	ON	The maximum volume is limited to protect your hearing.

Items	Options (●: Default settings)		
TIMER (Off timer)	● OFF	The timer does not work.	
	ON	1-99 min	⏻ is displayed on the player. You can check the remaining playback time by selecting this option during play. Turn the VOL +/- control on the remote repeatedly to increase or decrease the length of time by 5 minutes, or keep turning the VOL +/- control to increase or decrease by 1 minute. The default setting is “10 min”
AUDIO OUT <sup>6)</sup> (External audio output)	● HEADPHONE	Select this when you connect the supplied headphones or earphones.	
	LINE OUT	Select this when you connect other devices such as active speakers with an audio cord (☞ page 33).	
BEEP (Sound of operation)	● ON	The beep sounds when you operate the player.	
	OFF	The beep is turned off.	
SEAMLESS <sup>5) 6)</sup> (Playing tracks continuously)	● OFF	The CD is played as recorded on the disc, including spaces between tracks.	
	ON	The CD is played without space between tracks.	
POWER SAVE (The LCD backlight on the remote/ player and the OPR lamp on the player) <sup>6)</sup>	● OFF	The display lights up on both the remote and the CD player for about 10 seconds, then turns off. The OPR lamp on the player remains lit.	
	1	The display does not light up on either the remote or the CD player.	
	2	The display does not light up on either the remote or the CD player. Furthermore, the SOUND settings are not effective.	
PLAY ORDER (Playback order) <sup>6)</sup>	TRACK	● NORMAL	Play back the music source in the order of recording.
		ID3tagTNO	Play back in the order of ID3 tag number.
		FILE NAME	Play back in the alphabetical order of the file names.
	GROUP	● OFF	Play back the music source in the order of recording.
		ON	Play back the music source in the order of group names.
DIRECTION (Inverting the characters on the display)	● NORMAL	The characters appear on the display in the normal direction.	
	REVERSE	The characters appear on the display of the remote in the reverse direction so that you can read them from the opposite side. When you set the CUSTOM item of the EQUALIZER setting or perform the File View searching, VOL +/- on the remote operates in an opposite way.	

Continued ➞

Items	Options (●: Default settings)	
CD-EXTRA <sup>6) 7)</sup> (Playback by disc format)	● OFF	Set to "OFF" as long as you can play your CD normally.
	ON	If you cannot play your CD-Extra, set to "ON." You may play it.
ANIMATION (Selecting animation screen)	● OFF	The ordinary playback screen is displayed when you have not used any controls for a specified period of time.
	ON	Animation screen appears when you have not used any controls for a specified period of time.

1)For D-NE920 only:

Even if you select "S. CHINESE" or "T. CHINESE" on the menu screen of the CD player, menu text appears in English on the remote.

2)For D-NE920 only:

Even if you select "S. CHINESE" or "T. CHINESE" on the menu screen of the CD player, "----" appears on the remote.

3)Depending on the model you purchased, "G-PRO" is displayed on the remote.

4)AVLS is an abbreviation of the Automatic Volume Limiter System.

5)This function works only for ATRAC CDs.

6)You can set this up only while the player is stopped.

7)This function works only for Audio CDs and CD-Extra CDs.


#### Notes

- Even if "G-PROTECTION" is set to "2," sound may skip:
  - when the CD player receives stronger continuous shock than expected,
  - when a dirty or scratched CD is played, or
  - for CD-Rs/CD-RWs, when a poor-quality disc is played or there is a problem with the original recording device or application software.
- Even if "SEAMLESS" is set to "ON," the tracks may not play continuously depending on how the source music was recorded.



## Connecting Other Devices

You can listen to CDs through a stereo system and record CDs on a MiniDisc or a cassette tape. See the instruction manual that comes with the device you want to connect. Be sure to turn off all devices before making the connections and changing the settings explained below.

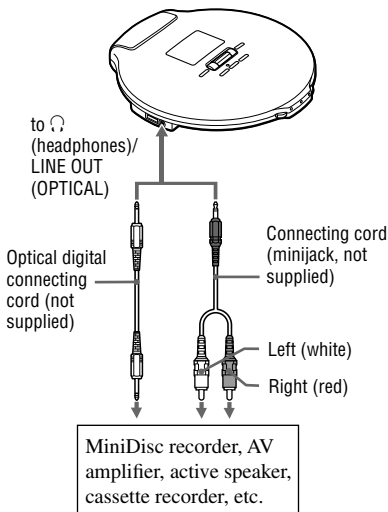

“LINE OUT” or “HEADPHONE” blinks for about 5 seconds on the display of the player when a connecting cord is connected. You need to change the setting for “AUDIO OUT” in the OPTION menu so that sound is output to the connected device. The settings of “AUDIO OUT” are shown below. To make those settings, see page 29, 31.

Connected device*	Setting
Headphones	HEADPHONE
Device connected using the connecting cord	LINE OUT

When you connect another device, set this to “LINE OUT.” When the setting is “LINE OUT,” volume cannot be adjusted using either the player or the remote, and the sound function does not work.

\* When you connect another device using the optical digital connecting cord, you do not have to make those settings. The setting changes automatically.

### Notes

- Before you play a CD, turn down the volume of the connected device to avoid damaging the connected speaker.
- Use the AC power adaptor for recording. If you use the rechargeable battery or a dry battery as a power source, the battery may become completely depleted in the middle of recording.
- This CD player uses the Serial Copy Management System, which allows only first generation digital copies to be made.
- When playing an ATRAC CD/MP3 CD, optical digital signals are not output from the /LINE OUT (OPTICAL) jack. When recording or playing an ATRAC CD/MP3 CD using a connected device, use only an analog connecting cord.
- When using an optical digital connecting cord, make sure that the CD player is paused before you start to record a CD on a MiniDisc, DAT, etc.
- To record high quality CD sound, set “G-PROTECTION” to “1” in the OPTION menu.

## Troubleshooting

Should any problem persist after you have checked these symptoms, consult your nearest Sony dealer.

### Power

Symptom	Cause and/or corrective action
The rechargeable battery cannot be charged.	<ul style="list-style-type: none"> <li>→ The rechargeable battery is not inserted in the battery compartment. Insert the rechargeable battery (🔗 page 11).</li> <li>→ The terminals of the charging stand are dirty. Wipe them with a soft, dry cloth (🔗 page 38).</li> <li>→ The CD is playing. Turn it off (🔗 page 17).</li> <li>→ The CD player is not placed correctly on the charging stand. Place the player on the stand securely and make sure that the OPR lamp lights up (🔗 page 11).</li> </ul>

### Sound

Symptom	Cause and/or corrective action
The volume does not increase even if you turn the VOL +/- control on the remote in the + direction repeatedly (even if you flick the jog lever toward ^ repeatedly on the player).	<ul style="list-style-type: none"> <li>→ "AVLS" is set to "ON." Set it to "OFF" (🔗 page 30).</li> <li>→ "AUDIO OUT" is set to "LINE OUT." Set it to "HEADPHONE" (🔗 page 31).</li> </ul>
No sound, or noise is heard.	<ul style="list-style-type: none"> <li>→ Connect the headphones/earphones plugs firmly.</li> <li>→ The plugs are dirty. Clean the headphones/earphones plugs with a dry soft cloth periodically.</li> </ul>
The volume cannot be adjusted.	<ul style="list-style-type: none"> <li>→ "AUDIO OUT" is set to "LINE OUT." Adjust the volume using the volume control on the connected device, or set "AUDIO OUT" to "HEADPHONE" (🔗 page 31).</li> </ul>
A rustling noise is heard from the CD.	<ul style="list-style-type: none"> <li>→ Close the lid of the battery compartment firmly (🔗 page 11).</li> </ul>
When using the player with a stereo system connected, the sound is distorted or noisy.	<ul style="list-style-type: none"> <li>→ "AUDIO OUT" is set to "LINE OUT." Adjust the volume of the connected device (🔗 page 31).</li> <li>→ "AUDIO OUT" is set to "HEADPHONE." Adjust the volume on the player (🔗 page 31).</li> </ul>
EQUALIZER items cannot be set up.	<ul style="list-style-type: none"> <li>→ "POWER SAVE" is set to "2" (🔗 page 31).</li> </ul>

## Operation/Playback

Symptom	Cause and/or corrective action
The playing time is too short. The CD does not play.	<ul style="list-style-type: none"> <li>→ Check that you are using an alkaline battery and not a manganese battery.</li> <li>→ Replace the dry battery with a new LR6 (size AA) alkaline battery (🔧 page 13).</li> <li>→ Charge and discharge the rechargeable battery several times (🔧 page 11).</li> </ul>
Certain tracks cannot be played.	<ul style="list-style-type: none"> <li>→ You tried to play files saved in a format that is not compatible with this player (🔧 page 5).</li> <li>→ Change the setting of “CD-EXTRA” in the OPTION menu. You may play your CD (🔧 page 32).</li> </ul>
“Lo Batt” appears on the display, and the CD does not play.	<ul style="list-style-type: none"> <li>→ The rechargeable battery is used up completely. Charge the battery (🔧 page 11).</li> <li>→ Replace the dry battery with a new LR6 (size AA) alkaline battery (🔧 page 13).</li> </ul>
“Hi DC in” appears on the display.	<ul style="list-style-type: none"> <li>→ An AC power adaptor which is rated higher than the one supplied or recommended is being used. Use only the supplied AC power adaptor or the car battery cord recommended in “Optional Accessories” (🔧 page 39).</li> </ul>
The CD does not play, or “No Disc” appears on the display when a CD is placed in the player.	<ul style="list-style-type: none"> <li>→ The CD is dirty or defective. Clean it or change it.</li> <li>→ Check that the CD is inserted with the label side up (🔧 page 16).</li> <li>→ Moisture condensation has occurred. Leave the CD player aside for several hours until the moisture evaporates.</li> <li>→ Close the lid of the battery compartment firmly (🔧 page 11).</li> <li>→ Make sure the battery is inserted correctly (🔧 page 11, 13).</li> <li>→ Connect the AC power adaptor to an AC outlet securely (🔧 page 15).</li> <li>→ Press ►   on the remote (on the player, press ►   of the jog lever) after one second or more has passed since the AC power adaptor was connected.</li> <li>→ The CD-R/CD-RW in the player is blank.</li> <li>→ There is a problem with the quality of the CD-R/CD-RW, recording device, or application software.</li> </ul>
The OPR lamp flashes on the player when you press a button, and the CD does not play.	<ul style="list-style-type: none"> <li>→ The buttons are locked. Slide the HOLD switch back (🔧 page 18).</li> </ul>

Continued ➞

Symptom	Cause and/or corrective action
Playback starts from the point you stopped (resume function).	→ The resume function is working. To start play from the first track, press <b>▶  </b> on the remote while the player is stopped (on the player, press and hold <b>▶  </b> on the jog lever) until the first track starts playing, or open the lid of the player (Ⓢ page 17). Or, remove all power sources, and then insert the battery or connect the AC power adaptor again.
During playback of an ATRAC CD or MP3 CD, the CD does not rotate but you can hear the sound normally.	→ This player is designed to stop the rotation of an ATRAC CD or MP3 CD during playback to reduce the power consumption. The player is not malfunctioning.
"No File" appears on the display after you press <b>▶  </b> on the remote (on the player, after you press <b>▶  </b> on the jog lever) or when the lid of the player is closed.	→ There are no ATRAC3plus/MP3 files on the CD-R/CD-RW. → A CD-R/CD-RW from which the data has been erased is being used. → The CD is dirty.
The LCD display becomes hard to see or slows down.	→ You are using your CD player at high temperatures (above 40°C/104°F) or at low temperatures (below 0°C/32°F). At room temperature, the display will return to its normal operating condition.
🔍 is flashing quickly on the display of the remote control, and you cannot locate the beginning of the track or a specific point in the track.	→ The CD player has entered the preparation stage of Bookmark play. Change the PLAY MODE setting to "ALL" (Ⓢ page 23).
Even though you have not selected "BOOKMARK," 🔍 (Bookmark) flashes.	→ If you have selected a playback option other than "BOOKMARK," 🔍 (Bookmark) flashes.
Play stopped abruptly.	→ The off timer has been set. Change the setting of "TIMER" to "OFF" (Ⓢ page 31). → The rechargeable battery or the dry battery is used up completely. Charge the rechargeable battery (Ⓢ page 11), or replace the dry battery with a new LR6 (size AA) alkaline battery (Ⓢ page 13).
You cannot operate the player, and a sequence of 8 numbers or letters appear on the display of the CD player and the remote.	→ This phenomenon may occur, depending on the CD you are using. Remove all power sources, and then insert the battery or reconnect the AC power adaptor. Try to operate the player again. If the problem persists, consult your nearest Sony dealer.

## Others

Symptom	Cause and/or corrective action
During recording with an optical digital connection, the track number cannot be recorded correctly.	<ul style="list-style-type: none"><li>→ Record the track number again using a MiniDisc recorder, DAT recorder, etc.</li><li>→ See the instruction manual that comes with the recording device. Adjust the volume on the player.</li></ul>
When closing the lid of the CD player, the CD starts to rotate.	<ul style="list-style-type: none"><li>→ The player is reading the information on the CD, not malfunctioning.</li></ul>
You cannot operate the CD player properly using the remote.	<ul style="list-style-type: none"><li>→ The buttons on the player are kept pressed by mistake.</li><li>→ The remote is not connected securely.</li></ul>

## Maintenance

### To clean the casing

Use a soft cloth slightly moistened in water or a mild detergent solution. Do not use alcohol, benzine or thinner.

### To clean the terminals

If the terminals on the charging stand become dirty, the battery may not be charged properly. Clean the terminals with a cotton swab or a dry cloth periodically as illustrated below.

Terminals



## Specifications

### System

Compact disc digital audio system

### Laser diode properties

Material: GaAlAs

Wavelength:  $\lambda = 770 - 800 \text{ nm}$

Emission duration: Continuous

Laser output: Less than  $44.6 \mu\text{W}$

(This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

### D-A conversion

1-bit quartz time-axis control

### Frequency response

20 - 20 000 Hz  $\pm 1 \text{ dB}$  (measured by JEITA)

### Output (at 3 V input level)

Line output (stereo minijack)

Output level 0.7 V rms at 47 k $\Omega$

Recommended load impedance over 10 k $\Omega$

Headphones (stereo minijack)

Approx. 5 mW + Approx. 5 mW at 16  $\Omega$

(Approx. 1.5 mW + Approx. 1.5 mW at 16  $\Omega$ )\*

\*For the customers in Europe

Optical digital output (optical output connector)

Output level: -21 - -15 dBm

Wavelength: 630 - 690 nm at peak level

### Power requirements

- Sony NH-14WM rechargeable battery:  
1.2 V DC  $\times$  1
- LR6 (size AA) battery: 1.5 V DC  $\times$  1
- AC power adaptor (DC IN 3 V jack):  
220 V, 50 Hz (Model for China)  
120 V, 60 Hz (Model for Mexico)
- Rated current: 1 A

### Operating temperature

5°C - 35°C (41°F - 95°F)

### Dimensions (w/h/d) (excluding projecting parts and controls)

Approx. 127  $\times$  20.6  $\times$  136.4 mm (5  $\times$   $1\frac{3}{16}$   $\times$  5  $\frac{3}{8}$  in.)

### Mass (excluding accessories)

Approx. 160 g (5.7 oz.)

US and foreign patents licensed from Dolby Laboratories.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Design and specifications are subject to change without notice.

## Optional Accessories







 
AC power adaptor	AC-E30HG*
Active speaker system	SRS-Z1 SRS-Z30
Car battery cord	DCC-E345
Car battery cord with car connecting pack	DCC-E34CP
Car connecting pack	CPA-9C
Connecting cord	RK-G129 RK-G136
Earphones (except for the customers in France)	MDR-EX71SL MDR-Q55SL
Earphones (for the customers in France)	MDR-E0931SP

\* Specifications for AC power adaptors vary for each area. Check your local voltage and the shape of the plug before purchasing.

Your dealer may not handle some of the accessories listed above. Please ask the dealer for detailed information about the accessories in your country/region.

# Index

## Symbols

-  (Battery) 11, 14
-  (disc) 16
- 1 23
- a00 23
- a00 SHUF 23
-  (BOOKMARK) 23, 24
-  (GROUP) 23
- PGM 23
-  (PLAYLIST) 23
- SHUF 23
-  (Repeat play) 26
-  (Timer) 31

## A

- ACTIVE 28
- AC power adaptor 8
- ALL 23
- ANIMATION 32
- ATRAC3plus 5
- ATRAC CD 5
- AUDIO OUT 31, 33
- AUTO RANKING 23
- AVLS 30

## B

- Battery carrying case 8
- Battery compartment lid 11
- Battery life 14
- BEEP 31
- BOOKMARK 23, 24

## C

- Carrying pouch 8
- CD-DA format 5
- CD-EXTRA 32
- CD-Extra 5
- CD-ROM (SonicStage) 8
- CD-TEXT 21
- CD player display 10, 21
- Charging stand 8, 11, 15, 38
- CLEARBASS 26, 28
- Clip on the remote 8
- CUSTOM 28

## D

- DIRECTION 31

## E

- Earphones 8
- EQUALIZER 26, 28
- External battery case 8, 13

## F

- File View 18

## G

- G-PROTECTION 30
- GROUP 23, 24, 31
- Group 6, 24
- GROUP SHUFFLE 23, 24

## H

- HEADPHONE 31, 33
- HEAVY 28
- HOLD function 18

## I

- ID3 tag 20
- INTRO 23

## L

- LANGUAGE 30
- LINE OUT 31, 33
- List View 19

## M

- m3u play list play 25
- MENU 30
- Mix-Mode CD 5
- MP3 CD 5

## O

- OPTION 30
- Optional Accessories 39

## P

- Pause 17
- Play 17
- PLAYLIST 23
- PLAY MODE 22
- PLAY ORDER 31
- POWER SAVE 31
- PROGRAM 23, 25

## R

- RANKING SHUF 23
- Rechargeable battery 8, 11
- Remote control 8
- Remote display 10, 20
- Repeat play 26



## **S**

SEAMLESS 31

Search 17

SHUFFLE 23

SOFT 28

SonicStage 4

SOUND 28

Stop 17

## **T**

TEXT 30

TIMER 31

TRACK 31



**This warranty is only valid in Canada.**

**SONY®**

Network Walkman  
Net MD Walkman  
Hi-MD Walkman

ATRAC CD Player  
ATRAC CD Walkman  
IC Recorder

## LIMITED WARRANTY

Sony of Canada ("Sony") warrants this Product (including any accessories) against defects in material or workmanship as follows:

1. **LABOUR:** For a period of 90 days from the date of purchase, if this Product is determined to be defective, Sony will repair or replace the Product, at its option, at no charge, or pay the labour charges to any Sony authorized service facility. After the Warranty Period, you must pay for all labour charges.

2. **PARTS:** In addition, Sony will supply, at no charge, new or rebuilt replacements in exchange for defective parts for a period of one (1) year. After 90 days from the date of purchase, labour for removal and installation is available from Sony authorized service facilities or a Sony Service Centre at your expense.

You can extend the warranty period for an additional nine months by registering your product ([www.sonymstyle.ca](http://www.sonymstyle.ca)). Once you register your product, the limited warranty period is twelve months from the original date of purchase from Sony or a Sony authorized dealer. The ninety (90) day warranty period is extendable only to the original purchaser, for an additional period of nine (9) months, for a total of twelve (12) months from the date of purchase when the Product is registered electronically. After the applicable period you must pay for all parts and labour charges.

To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any authorized Sony service facility.

This warranty does not cover customer instruction, installation, set up adjustments or signal reception problems.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product, including the antenna. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Sony to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty is valid only in Canada.

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

This warranty is invalid if the factory-applied serial number has been altered or removed from the Product.

**REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.**

Some provinces do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from province to province.

For your convenience, Sony of Canada Ltd. has established telephone numbers for frequently asked questions:

To locate the service or dealer nearest you, or for service assistance or resolution of a service problem, or for product information or operation, call:

**Sony Customer Information Center**

1-877-770-7669

or write to:

Sony of Canada Ltd.

115 Gordon Baker Road, Toronto, Ontario M2H 3R6 CANADA

or visit;

[www.sonymstyle.ca/registration](http://www.sonymstyle.ca/registration)

Portable Audio

This information is used to process your warranty registration and for after-sales support purposes. It may also be used by Sony of Canada Ltd. and affiliated Sony companies for customer relationship development and analysis, and to provide you with information and promotional offers on other products and services that may be of interest to you. For a copy of our Privacy Code, please visit our website at [www.sonymstyle.ca/privacy](http://www.sonymstyle.ca/privacy) or call 1-877-899-7669.